



DeWalt DW920 Lock Switch Replacement

If your drill won't lock into place then there may be an issue with the lock switch. This guide will show you how to replace your lock switch.

Written By: Stephen Rada





TOOLS:


- [T10 Torx Screwdriver](#) (1)
 - [H5.0 bit Driver](#) (2)
-

Step 1 — Disassembly



- Use a T-10 Torx bit screwdriver to take out the 4 screws shown.

Step 2

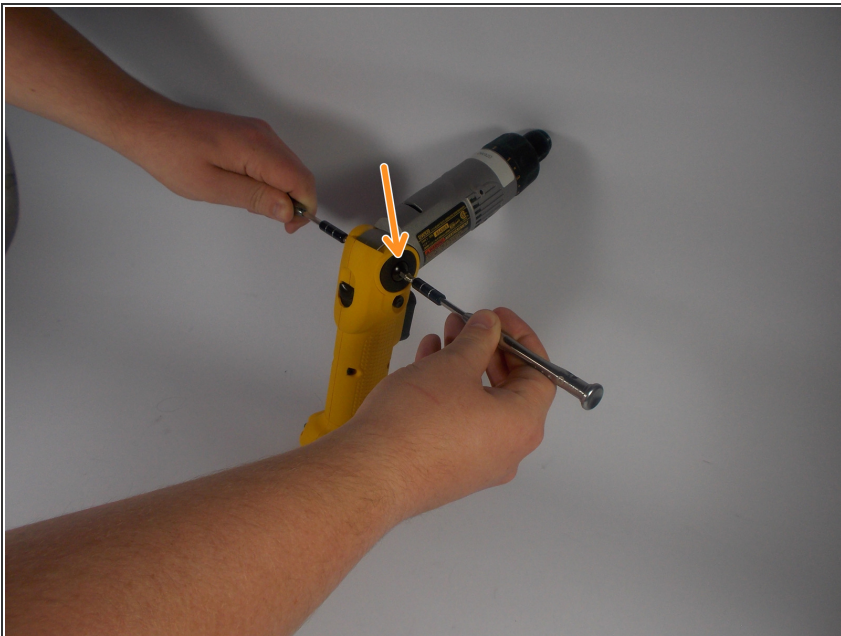

- Use 2 H-5.0 bit drivers to take out the main bolt and head.
- Note: there will be blue locktite on the tread

Step 3





- Pull apart 2 halves of the handle.

Step 4 — Lock Switch



- Locate the switch on the top of the drill right before the bending joint.

Step 5

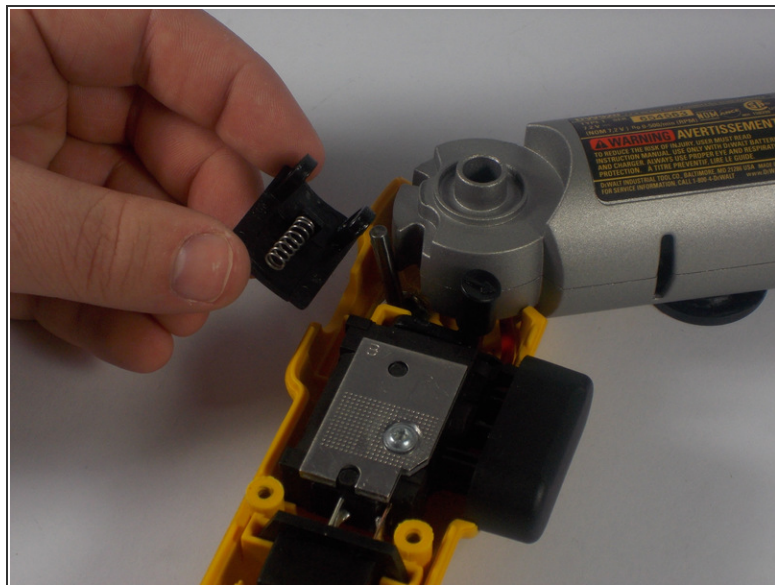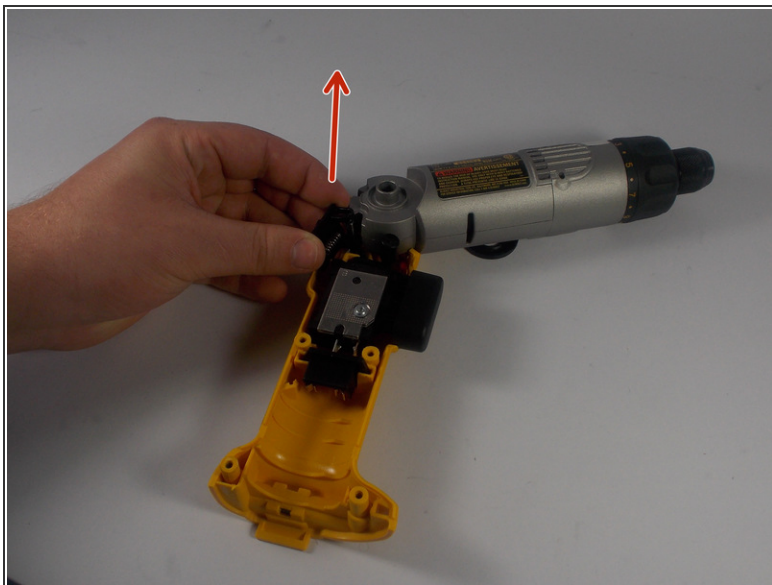

- Firmly grasp the switch with two fingers and lift it straight up. The spring should remain attached to the switch during this process.
- Note: It should lift right out. If it is caught on anything do not force it out.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 03:28:00 PM.